



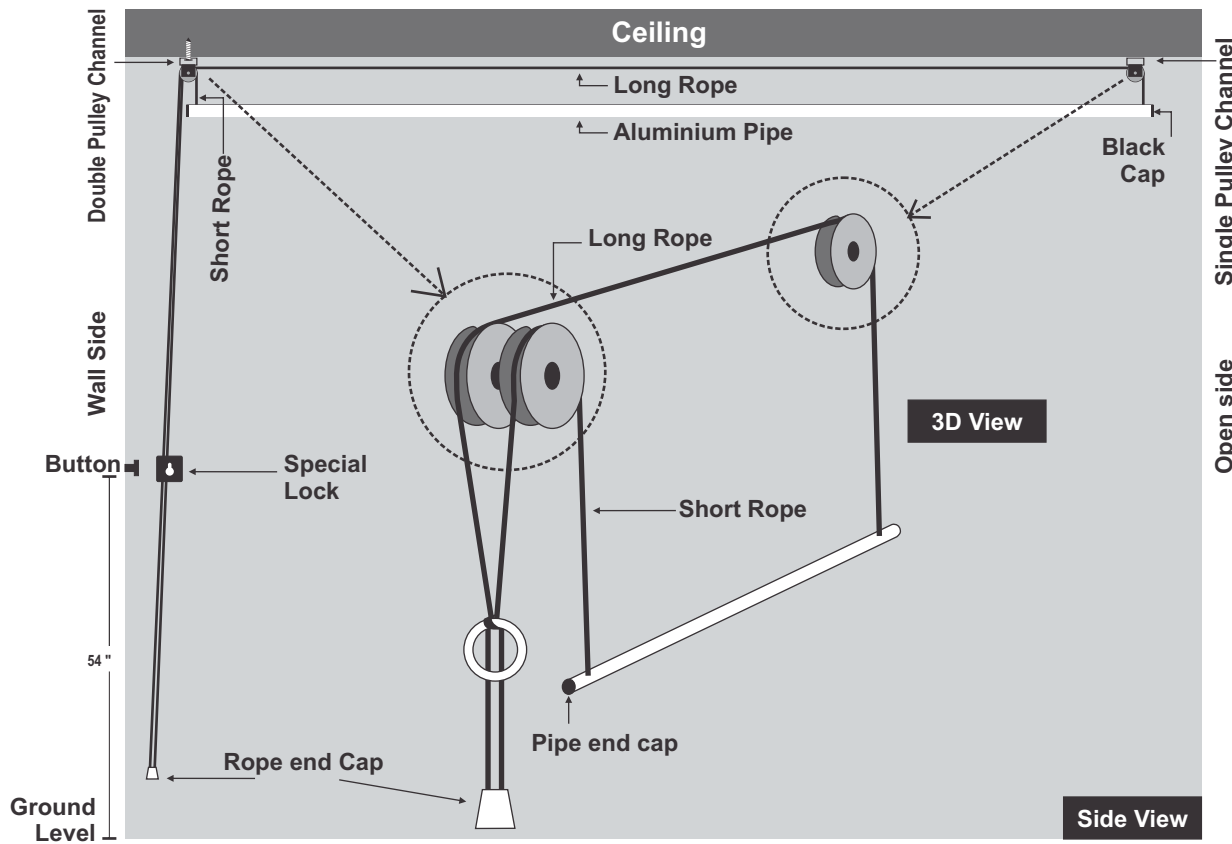

India's Leading Clothes Drying Systems

INSTRUCTION MANUAL

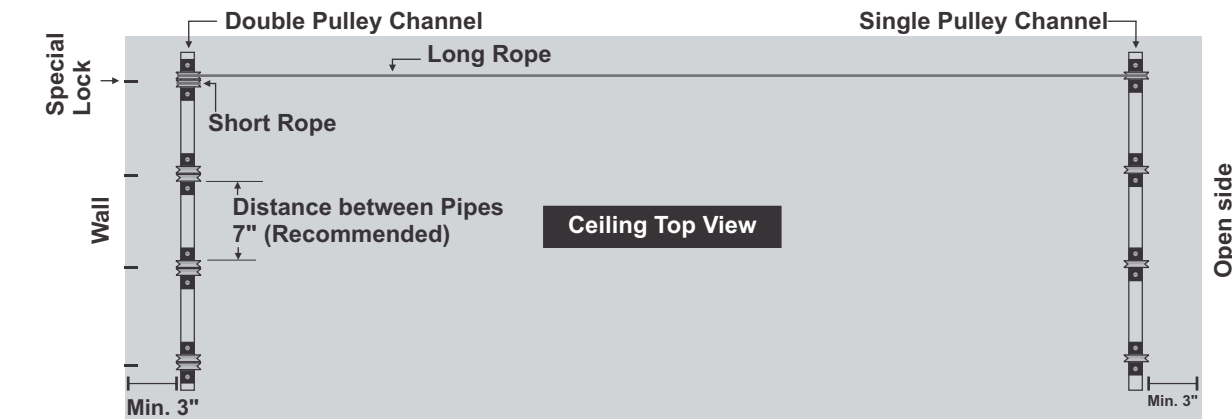

OCTAGON - 020-24487849

CONTENTS OF THE KIT

- Aluminium Pipes : 8 nos. ■ Aluminium Channel with Double & Single Pulley Assembly : 1 no. each
- Rope : 11 feet length (**Short**) : 4 nos. + 15 to 20 feet length (**Long**) : 4 nos. ■ Fitting material Pouch containing ●Screws 38mm-12 nos.
- Special Lock With Button 4 nos. ● Pipe end cap 8 nos. ● Rope end Cap 4 nos. ● PVC Plug 12 nos. ● Adhesive Tube 1 No.



Easy Dry Systems Pvt. Ltd.


Shop # 8, Sankla Arcade, Karve Rd., Pune 411004 Ph.: 99229 15482
 email.: sales@easydrysystems.com www.easydrysystems.com

Pulley System Installation Manual


1. Take out the pipes & channel assembly from Kit.

2. Connecting the pipes

- Fix the plain pipe on to the connector so as to match the groove on both pipes. **(Fig 1)**

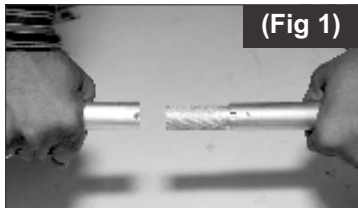

- Put 3/4 drops of adhesive on the open portion of connector **(Fig. 2)**
- Repeat the above for remaining 3 pipes.

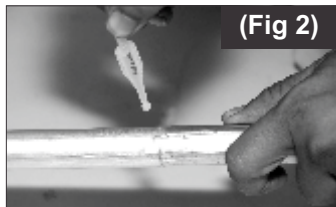

3. Fitting the channels to the ceiling

- Both channels should be parallel to each other. The channel with double pulley should be fitted at the pulling end. Keep minimum 3" distance from the wall. Use PVC plugs & screws to fit the channels in the ceiling. The distance between two channel should be equal to the length of the pipe. **(Please Refer the Ceiling Top View on the Rear Page)**

4. Bracket-Pulley assembly


- The bracket can be moved within the channel by loosening the two screws (Plastic/Metal) on sides of each bracket. Tighten the screws so that the single & double bracket pulleys on the two channels are parallel to each other.

7" distance between two brackets is recommended. **(Fig 3)**

5. **Rope Assembly :** For Rope Assembly please refer the 3D view on the rear page & also refer the following instructions.



- For Brackets With Guide Bush :** Insert the rope from any of the two pulleys, when it comes out insert it in the hole of Guide Bush so that the open end comes out. Repeat the procedure for all pipes. **(Fig 4)**

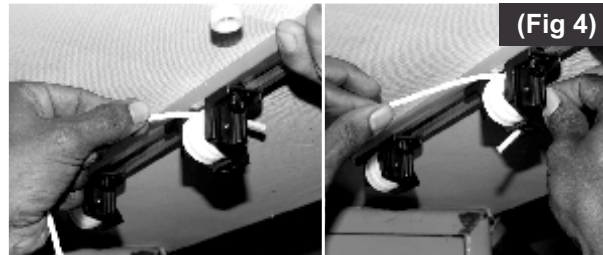


- Insert rope from the hole, tie a knot and again pull the rope at the single pulley end.
- Fix the black cap to the pipe end
- Repeat this procedure for both ends of all pipes. **(Fig 5)**




6. Fixing Special lock :

- Fix the white button with the help of the screw at a height of 54" from the bottom **(Fig 6)**

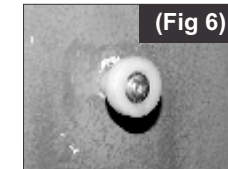

- Special lock has two holes on the top. Insert the two ropes coming down from the double pulley in the holes. Make sure that the rope will not get twisted. **(Fig 7)**

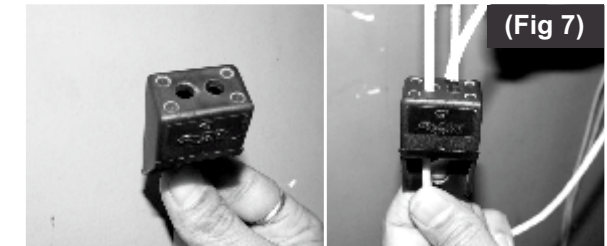

- Place the lock in the white button, push it up slightly & tie a knot of two ropes & insert the knot into the cavity so that it will not be visible from the front. **(Fig 8)**



- Insert a rope end cap through the open end of the two ropes and tie a knot to the open end. **(Fig 9)**

